

ScoreMaster ses

HELP: Press this Key for help information
Press **ENTER** to exit

NUMERICAL KEYS: To prompt in menu's and correction during **ADD FRAME**

START/MENU: Press this key to start a new game or to change settings

RESET:
Machine reset at malfunction

REVIEW:
Return to Score screen

WAITRESS:
Service request

FOUL:
Manual foul line input


CLEAR FRAME:
Correction key deletes last frame

ENTER:
Confirm input

ADD FRAME:
Correction key adds new frame

CURSOR KEYS: To scroll through the menu's

STRIKE: Adds Strike during **ADD FRAME**

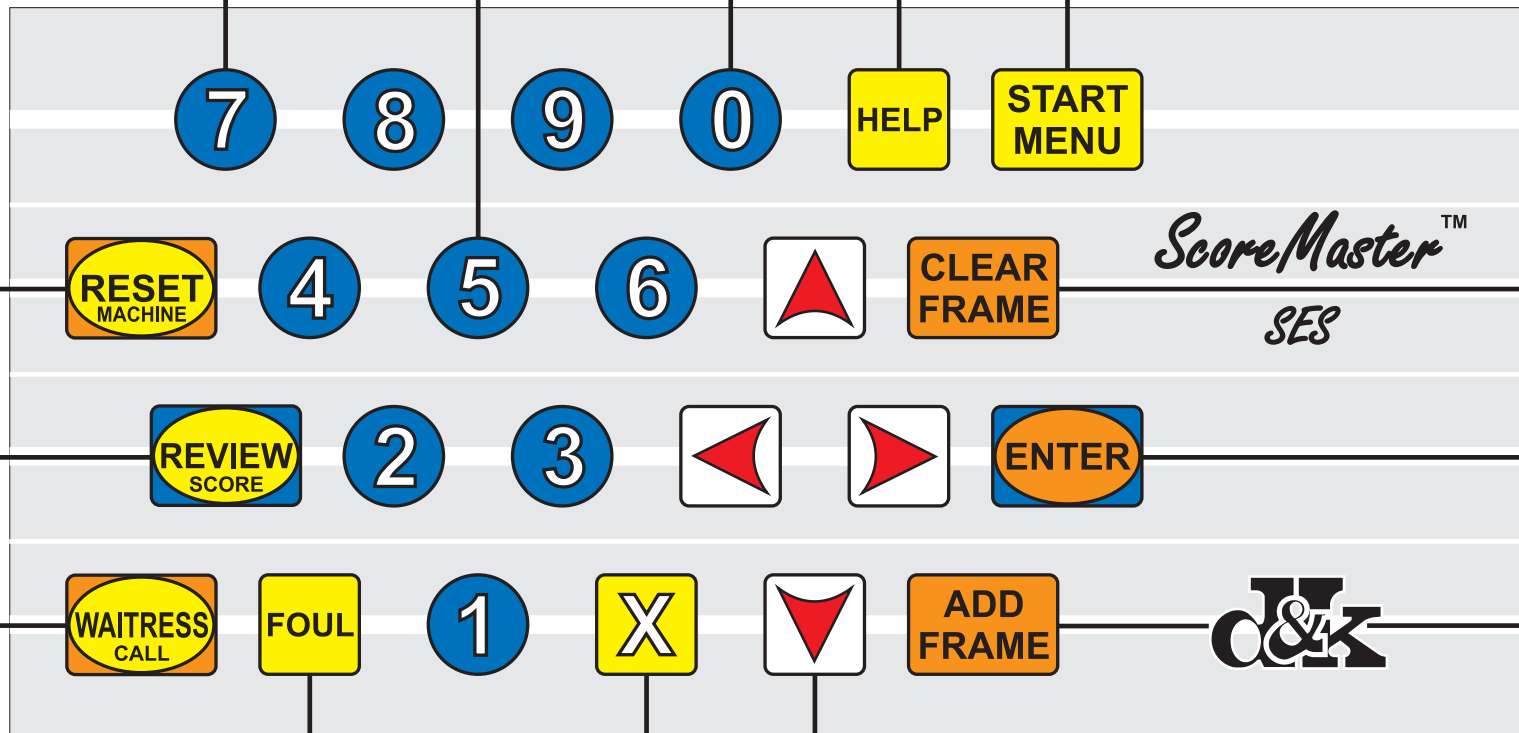

Keyboard layout and operation